


Uputstvo za upotrebu

TELESNA VAGA

PP3020

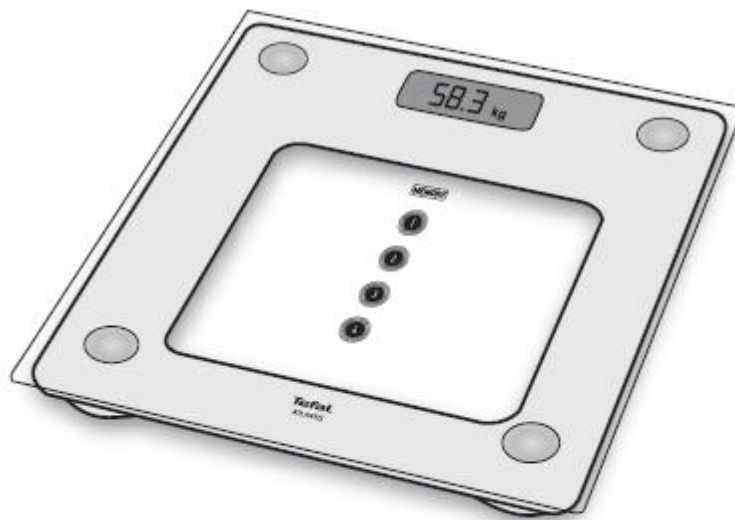

www.tefal.com




1

Err



2

0.0 kg

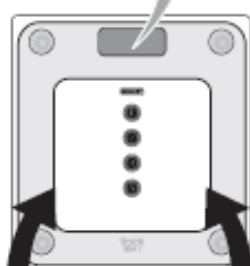



3

53.1 kg




5tP



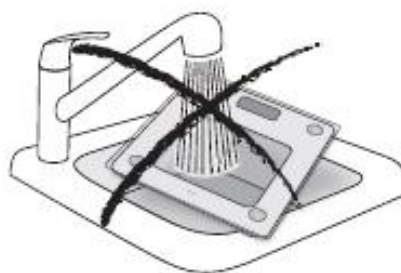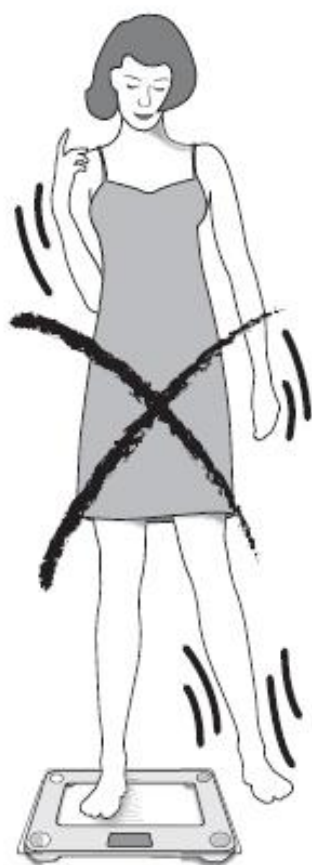




OK

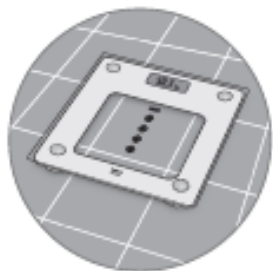

OK




OK

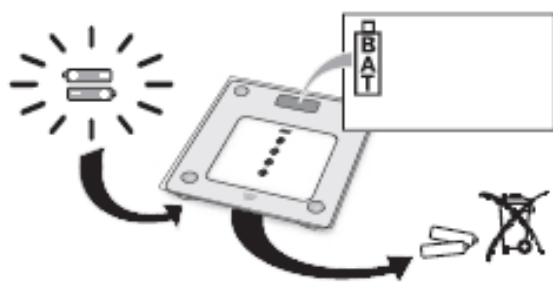

LR03
Alkaline Battery



R03
HR03

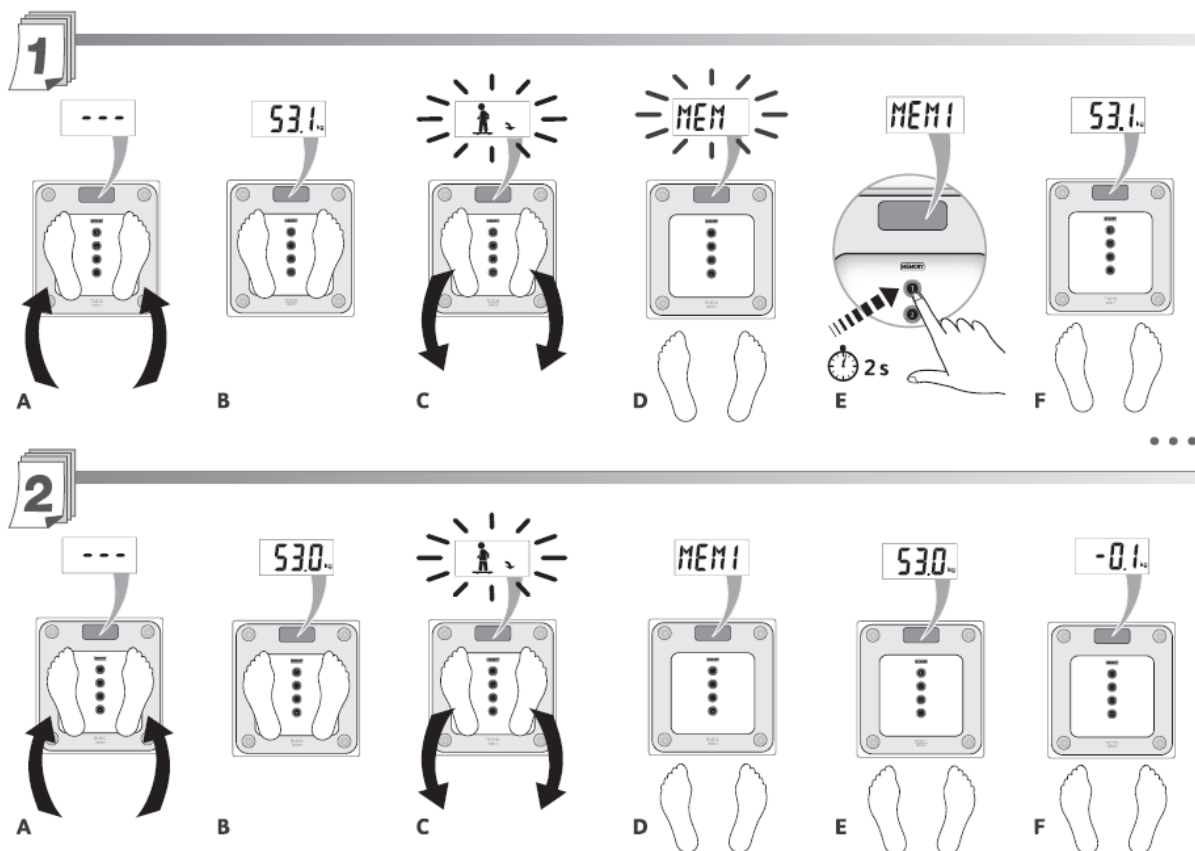

Zaštita okoline

- Učestvujmo u zaštiti okoline!

Vaš aparat sadrži brojne vredne materijale koji se mogu reciklirati i ponovo upotrebiti.

Odnosite aparat na mesto za odlaganje sličnog otpada.

Nikada ne bacajte iskorišćene baterije u smeće, smatrajte ih hemijskim otpadom.

Odnosite baterije na mesto za recikliranje takvih proizvoda.